



Nelson™ Bedroom Furniture Care and Maintenance

With regular care and maintenance, your Herman Miller bedroom furniture will provide years of superior performance and satisfaction. To maintain the finish quality of your Herman Miller product, please follow the cleaning procedures provided below.

Headboard

Natural Cane

Normal Cleaning

Vacuum as needed, using a soft bristle brush attachment. Sweep lightly with the grain of the natural cane.

Do not vacuum with excessive force or use a vacuum attachment with a rotary brush.

Tweezers can be used to gently pull loose fibers or contaminants that become caught in the natural cane weave.

Spills

Immediately soak up the stain with a clean soft absorbent cloth.

Do not dry the stain completely or it may set. The longer a stain is allowed to remain, the more difficult it will be to remove.

Use a solution of mild (alkaline) warm soapy water (not overly soapy) applied with a damp clean soft cloth.

Work the cleaner into a lather or foam. Sweep with the grain of the natural cane.

Rinse several times with a clean damp cloth.

Allow to dry in an open area.

Never use hot water; it will set the stain.

Avoid scrubbing.



Materials

Headboard, Frame, Legs

Wood and Veneer

Normal Cleaning

Dust furniture with a slightly damp, soft, lint-free cloth.

Wipe dry with a dry, soft cloth in the direction of the wood grain.

Once a Month

Clean the surface with a clean soft cloth dampened with a quality cleaner formulated for wood furniture.

Wipe the surface in the direction of the wood grain to remove dirt and fingerprints.

Wipe dry with a clean, dry cloth.

Twice a Year

Apply a good quality furniture polish with a soft cloth.

Do not use aerosol-powered cleaners or polishes.

Also, do not use polishes containing waxes or abrasives, or polishes that are oil based.

Minor Repair of water rings, stains, and scratches

Rub the surface lightly in the direction of the wood grain using No. 000 steel wool.

Apply a scratch-removing polish with a color and value that simulates the veneer.

If the scratches are deep, consult a professional furniture refinisher.

Legs

Satin Chrome

Normal Cleaning

Wet cheesecloth in a nonabrasive cleaner, like liquid dish soap, and rub the satin chrome leg lightly until the original luster reappears.

Dry the component with a soft cloth to remove any soap residue.

Cushion, Bolsters

Textile

Normal Cleaning

Vacuum fabric as needed, using an upholstery attachment.

Do not brush fabric or use a vacuum attachment with a rotary brush.

Brushing may permanently damage the nap or change the character of the fabric.

Do not apply water or any liquid solution.


Wetting the fabric with any liquid solution may result in permanent damage.

If further cleaning is needed, dry-clean or spot clean fabric with solvent cleaner.

Large Areas

If large areas are soiled contact a professional cleaning firm.

June 2017

© 2017 Herman Miller, Inc., Zeeland, Michigan
©  Herman Miller are among the registered trademarks of Herman Miller, Inc.
™ Nelson is among the trademarks of Herman Miller, Inc.